

eSATA Combo USB ExpressCard Quick Installation Guide

Key Features:

eSATA II 3Gbps

- Silicon Image chipset.
- Fully compliant with ExpressCard 34mm wide module.
- Support one-lane 2.5Gbps PCI Express specification.
- Compliant with PCI Express Specification, revision 1.0a
- 1-lane 2.5Gbps ExpressCard/34 host interface supports ExpressCard/34 and ExpressCard/54 Notebook
- Fully RoHS compliant
- Easy plug and play installation.
- Supports Windows®2000, Windows®XP, or Higher.
- Support Linux

USB 2.0

- Driver program no need.
- Data transfer rate can be 1.5/12/480Mbps.
- Compliant with OHCI Specification for USB Rev 1.0a.
- Support USB OHCI & UHCI modes.
- Chains up 127 devices.
- Support devices hot swap.
- Easy plug and play installation.

Software Installation

Windows 2000 Driver Installation

1. Insert the eSATA II 2-channel ExpressCard/34 to the ExpressCard slot of your notebook computer. Push the card into the slot gently, yet firmly for a solid connection.

Note: some ExpressCard slots will click when the ExpressCard is fully inserted into the slot.

- Boots up your system.
- When **Found New Hardware Wizard** displays, click **Next**.
- Check **Search for a suitable driver for my device (recommended)**, click **Next**.
- Insert the driver CD, check **CD-ROM drives**, uncheck the other check boxes and click **Next**, then click **Next** again.
- When **Silicon Image Sil 3132 SATALink Controller** displays, click **Finish**.
- Remove the driver CD, click Yes to complete driver installation.
- Reboot your system. Now you can connect your eSATA II enclosure or other devices with the eSATA II 2-channel ExpressCard/34.

Windows XP/Server 2003 32bit/64bit Driver Installation

1. Insert the eSATA II 2-channel ExpressCard/34 to ExpressCard slot of your notebook computer. Push the card into the slot gently, yet firmly for a solid connection.

Note: some ExpressCard slots will click when the ExpressCard is fully inserted into the slot.

- Boots up your system.
- When **Found New Hardware Wizard** display, **XP (w/SP1 or earlier)/Server 2003**: continue to step #4.
XP (w/SP2 or later)/Server 2003 (w/SP1 or later): select No, not at this time, then click **Next**. Continue to step #4.
- When **Found New Hardware Wizard** displays **Mass Storage Controller**, insert the driver CD and check **Install the software automatically (Recommended)**, then click **Next**.
- When **Hardware Installation** displays **Silicon Image Sil 3132 SATALink Controller**, click **Next**, then **Finish**.
- Remove the driver CD, click **Yes** to complete driver installation.
- Reboot your system. Now you can connect your eSATA II enclosure or other devices with the eSATA II 2-channel ExpressCard/34.

Remark:

Green LED light will blink per channel when eSATA devices have been accessed.

To Verify Windows 2000/XP/Server 2003 Installation

- Right click **My Computer** and click **Manage**.
- Select **Device manager**.
- Double click **SCSI and RAID Controllers**, then double click Silicon Image **Sil 3132 SATALink Controller** to display driver properties.
- A message **This device is working properly** is displayed in the dialog box, the driver has been correctly installed.

Copyright:

Copyright© 2008 by this company. All right reserved. No part of this publication or its accompanying software may be reproduced or distributed in any form or by any means without the prior written permission of this company.

Disclaimer:

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specially disclaims any warranties, merchantability or fitness for any particular purpose. Further, this company reserves the right to revise the product specifications and all accompanying publications and software and to make changes from time to time in the contents hereof without obligation of this company to notify any person of such revision changes.

***All names are registered and unregistered trademarks of their respective Cor.**

